


# Honeywell Safety Products



## Emergency Eyewash



# lead them to safety

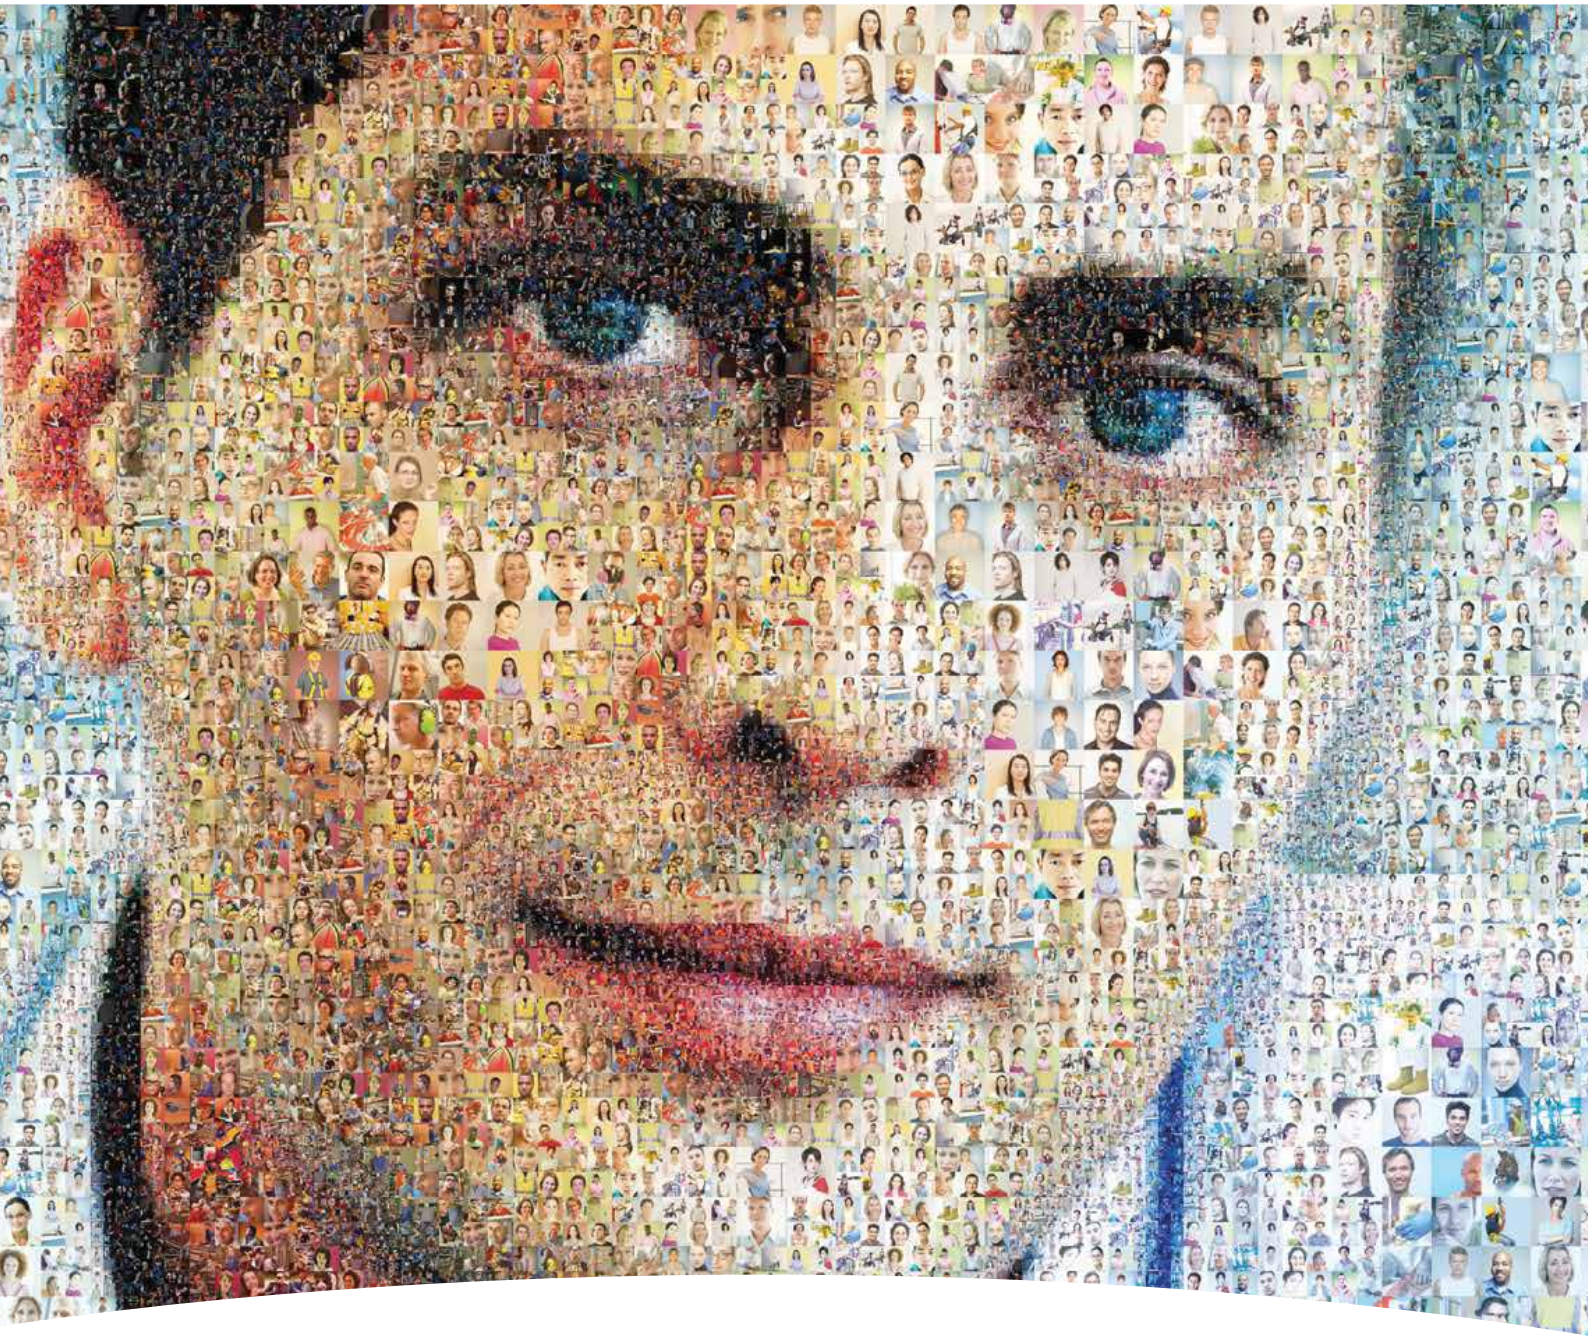

## Honeywell can help.

Honeywell Safety Products has the broadest portfolio of leading safety solutions in the marketplace today. Our core mission is to help safety managers build an enduring culture of safety that minimizes injuries and maintains a more protective and productive workplace. Partner with Honeywell to discover new ways to lead them to safety. Visit our website today.

# Honeywell

[www.honeywellsafety.com/culture](http://www.honeywellsafety.com/culture)



# Honeywell

€GÁ Píãæ Eyewa•h D^vã^

€I Á S^c[ náar^ Eyewa•h D^vã^

€I Á Pe!•o| a| Eyewa•h B| td^s

€I Á Wæ| Scatã} s

€I Á Ü^ã|

€JÁ A&&^s•orães

F€Á Üefer^n&ekPr[ d^ ccFeatur^• Matrã

FFÁF~ || Lã^ SSU Lãó} g



## World Leader in Emergency Eye Care

Since 1950, Honeywell Safety Products and its predecessors have manufactured and distributed leading safety and health products worldwide. Honeywell is the well-respected market leader in portable eyewash stations and is recognized for its wide range of emergency eyewash products including the first 100% sterile sealed-fluid cartridge and 100% sterile delivery station, the first self-contained gravity-fed station, the first heated self-contained gravity-fed station and the first heated sterile eyewash station.

### When Seconds Count, Portable Matters

The need for immediate flushing requires the installation of emergency eyewash devices in accessible locations that require no more than 10 SECONDS to reach. For a strong acid or strong caustic, the eyewash should be immediately adjacent to the hazard. Honeywell self-contained, portable eyewash stations require no plumbing for easy and affordable placement near any workplace hazard, and deliver a sterile or buffered saline solution superior to tap water for emergency eye care. Ordinary tap water, used in plumbed or some tank-type eyewash devices, may contain harmful bacteria or contaminants that can cause additional eye damage. A sterile or buffered saline solution is the most effective flushing fluid for emergency first aid.

**▲ WARNING!** Honeywell equipment should only be used in conjunction with the manufacturer's instructions. Failure to follow such instructions could result in serious injury including diminution or loss of vision.

FEATURED PRODUCT

## Fendall 2000™ Heated Accessory

Fendall 2000 Heated Accessory is the first of its kind and offers an innovative solution to the challenges presented by workplace environments that are extremely cold or vary due to seasonal weather changes.

Made of sturdy, long-lasting vinyl and tested and approved for use in temperatures as low as -40°, the heated accessory maintains the cartridge solution at a tepid temperature as required by the current ANSI Z358.1 standard.

It's perfect for outdoor worksites during cold weather months and low temperature work areas, such as freezers.

Made in the USA.



### Emergency Eyewash Features Enabled Safety Products RFID Technology

Both the Fendall 2000™ and Fendall Pure Flow 1000® Eyesaline cartridges are now RFID-enabled to simplify inspection, maintenance and inventory control to help support and strengthen workplace safety programs.

## PRIMARY EYEWASH DEVICE: STERILE SEALED FLUID CARTRIDGE

### Fendall 2000™

- Delivers 100% sterile saline from a 100% sterile delivery system
- 24-month cartridge life,\* saves time and money on replacements and inspections
- Built-in alarm system that sounds when the unit has been activated and again when the injured individual has completed the required 15-minute flush
- Deactivation button that allows for fast and easy maintenance without false activation
- Arm/headrest provides user comfort, enabling better compliance
- Integrated waste containment to prevent spills and is easily emptied
- Sleek assembly that fits in most locations
- Self-contained, with no plumbing required, makes this highly portable
- Easy-view side windows to check sterile solution expiration date and key contact information
- Heated Accessory (sold separately) available for use in temperatures as low as -40° while still maintaining the cartridge solution at a tepid temperature as required by the current ANSI Z358.1 standard
- Comes complete with emergency eyewash station sign, mounting bracket, installation DVD, tamper seal, and 1-year warranty. Sterile Eyesaline solution cartridge (sold separately). Cartridge manufactured in USA
- Meets current ANSI Z358.1 15-minute flush requirement for primary eyewash stations



32-002000-0000

SKU	Description
32-002000-0000	Sterile Eyewash Station (Trilingual)
32-ST2050-0000	Sterile Eyesaline Refill Cartridge for Fendall 2000 (Trilingual)
32-002001-0000	Heated Accessory (Trilingual)

\*Shelf life determined by date of manufacture. Always check product expiration date

**Honeywell**

Q~aa•ko]É^ad@}^,^||É{Á

## PRIMARY EYEWASH DEVICE: SEALED FLUID CARTRIDGE WITH STERILE OPTION



32-001000-0000



### Fendall Pure Flow 1000®

- Easy installation. No plumbing required. Can be easily and affordably placed near most workplace hazards with single bracket mounting device or transported with optional universal cart or stand
- Factory-sealed fluid cartridges eliminate mixing, measuring, and the opportunity for airborne particles or microorganisms to contaminate the fluid prior to use
- Easy to activate sure-grip handle provides instant, simple activation. When not in use, cover keeps dirt and other debris from collecting in the basin and nozzle area
- Unique nozzle design delivers a soft “ribbon” of our buffered Eyesaline solution
- Permits thorough flushing with a constant flow rate and stream height that provides 0.4 gpm for entire 15-minute cycle required by current ANSI Z358.1
- Captures waste fluid to eliminate spill hazards and simplify fluid disposal
- Integral valve at bottom of unit allows easy draining of reservoir after use
- 24-month cartridge life,\* at least four times longer than other primary self-contained eyewash devices, saves time and money on replacements and inspections. Cartridges (sold separately)
- Cartridges remain sealed until activated. Expiration date is included on activation straps – and cartridge replacement takes less than five minutes
- Meets current ANSI Z358.1 15-minute flush requirement for primary eyewash stations
- Made in the USA

SKU	Description
32-001000-0000	Eyewash Station (English)
32-001000-0022	Eyewash Station (French)
32-001050-0000	Eyesaline Refill Cartridges for Fendall Pure Flow 1000 (Trilingual)
32-ST1050-0000	Sterile Eyesaline Refill Cartridges for Fendall Pure Flow 1000
32-001053-0000	High Humidity Brace for Fendall Pure Flow 1000

\*Shelf life determined by date of manufacture. Always check product expiration date.

## PRIMARY EYEWASH DEVICE: REFILLABLE



32-000200-0000

### Fendall Porta Stream® II + III

- Easy installation with no plumbing required. Can be easily and affordably placed near most workplace hazards with single bracket mounting device or transported with optional universal cart or universal stand. Molded handle accepts hanging bracket for vertical or horizontal surface installation
- Versatile flushing fluid options include Eyesaline Concentrate – a buffered, saline solution superior to tap water for emergency eye care, and Water Additive
- Large 16 gallon (60.5L) capacity permits thorough flushing by providing 0.4 gpm over the entire 15-minute flushing period required by current ANSI Z358.1
- Nozzles cover a wide area around the eyes
- Simple strap design is easily removed for hands-free flushing, leaving hands free to hold eyelids open
- Properly installed, the system may be safely leaned upon during use
- Large fill hole/lockable fill cap to simplify refilling and cleaning. Reduces risk of possible tampering
- Easy-to-use design features simple, highly visible operating instructions on the unit itself
- Honeywell Eyesaline Concentrate requires 6-month maintenance cycle. Water Additive requires a 4-month maintenance cycle
- Meets current ANSI Z358.1 15-minute flush requirement for primary eyewash stations
- Made in the USA

Q ~ aa • K@] Ë ^ a d Q } ^ , ^ || B { Á

**PRIMARY EYEWASH DEVICE: REFILLABLE**

*(Fendall Porta Stream® II + III continued)*

SKU	Description
32-000200-0000	Eyewash Station (English) with Eyesaline Concentrate
32-000200-0020	Eyewash Station (English) with Eyesaline Concentrate (English/ French )
32-000200-0022	Eyewash Station (French) with Eyesaline Concentrate
32-000200-0070	Eyewash Station (Mexican Spanish) with Eyesaline Concentrate
32-000230-0000	Eyewash Station (English) with Water Additive
32-000230-0020	Eyewash Station (English) with Water Additive (English/French)
32-000230-0022	Eyewash Station (French) with Water Additive
32-000230-0070	Eyewash Station (Mexican Spanish) with Water Additive
32-000310-0000	Eyewash Station (freeze protected) with Eyesaline Concentrate



32-000310-0000

**SECONDARY EYEWASH DEVICE: REFILLABLE**

**Fendall Porta Stream® I**

- Delivers 6 minutes of uninterrupted, hands-free flushing — without costly plumbing
- Easy installation with no plumbing required. Can be easily and affordably placed near most workplace hazards with single bracket mounting device or transported with optional universal cart or universal stand. Molded handle accepts hanging bracket for vertical or horizontal surface installation
- Supplied with either 70 oz. (2.07L) of Eyesaline Concentrate which, when mixed with tap water, provides 6 gallons (22.7L) of buffered, Eyesaline solution superior to tap water for emergency eye care solution, or 8 oz. of Water Additive, enough for 14-16 gallons of water
- Nozzle strap is easily removed for hands-free flushing, leaving hands free to hold eyelids open
- Low maintenance with one-piece, molded construction and no moving parts
- Large fill hole simplifies refilling and cleaning
- Easy-to-use design features simple, highly visible operating instructions on the unit itself
- Eyesaline Concentrate requires 6-month maintenance cycle. Water Additive requires a 4-month maintenance cycle
- **DOES NOT MEET** the current ANSI Z358.1 15-minute flushing requirement
- Made in the USA



32-000100-0000

SKU	Description
32-000100-0000	Eyewash Station (English) with Eyesaline Concentrate
32-000100-0020	Eyewash Station (English) with Eyesaline Concentrate (English/ French)
32-000100-0022	Eyewash Station (French) with Eyesaline Concentrate
32-000100-0070	Eyewash Station (Spanish) with Eyesaline Concentrate
32-000130-0000	Eyewash Station (English) with Water Additive
32-000130-0020	Eyewash Station (English) with Water Additive (English/French)
32-000130-0022	Eyewash Station (French) with Water Additive
32-000130-0070	Eyewash Station (Spanish) with Water Additive

**Honeywell**

Q ~ aa • Kc ] E ^ a d @ } ^ , ^ | B { Á

## SECONDARY EYEWASH DEVICE: SEALED FLUID CARTRIDGE



32-000401-0000



32-000400-0000

### Fendall Flash Flood®

- Easy installation with no plumbing required. Can be easily wall mounted for placement near most workplace hazards
- One-gallon sealed cartridges are easy to store and offer quick changes without mixing or measuring
- Dual nozzles provide simultaneous flushing to both eyes for three minutes
- Unique cartridge design delivers Eyesaline solution – a buffered, pH-balanced Eyesaline solution that is superior to tap water for emergency eye care
- Highly portable system may be easily wall mounted
- Nozzle strap is easily removed for hands-free flushing, leaving hands free to hold eyelids open
- Easy-to-use design features simple, highly visible operating instructions
- Eyesaline solution cartridges, once installed, require a 6-month maintenance cycle. Unopened cartridges have a shelf life of up to 24 months\*
- **DOES NOT MEET** the current ANSI Z358.1 15-minute flushing requirement
- Made in the USA

SKU	Description
32-000400-0000	Eyewash Station (English)
32-000400-0022	Eyewash Station (French)
32-000402-0000	Wire Storage Rack for Fendall Flash Flood
32-000401-0000	Eyesaline Refill Cartridges for Fendall Flash Flood
32-000401-0022	Eyesaline Refill Cartridges (French) for Fendall Flash Flood

\*Shelf life determined by date of manufacture. Always check product expiration date.

## PERSONAL EYEWASH BOTTLES



32-000440-0000

### Eyesaline Personal Travel Bag

- Rugged, durable bag securely holds six 1 oz. and six 4 oz. bottles of Eyesaline sterile eyewash
- One-piece case construction with pockets to hold bottles, and a separate insert for important documents or additional first aid necessities
- Adjustable strap allows bag to fit around the back of a car, truck or sport utility vehicle seat for easy transport and convenience
- Bag is made of vinyl material allowing it to remain clean and visible
- Eyesaline bottles proudly made in the USA

SKU	Description
32-000440-0000	Eyesaline Personal Travel Bag (13" x 9" x 4")
32-000440-0020	Eyesaline Personal Travel Bag (French) (13" x 9" x 4")

**Honeywell**

Q ~ aa • kO ] E ^ aD Q } ^ , ^ || E { Á



**PERSONAL EYEWASH BOTTLES**

**Eyesaline Eyewash Bottles**

- Bottles contain a buffered, saline solution that is sterile and superior to tap water for emergency eye care
- Blow-fill-seal bottles are tamper resistant, yet easily removed in an emergency
- Extended-flow nozzles (16 and 32 oz. containers) provide longer flow than conventional 16 and 32 oz. containers
- User-controlled volume delivery (1, 4, 8 oz. products). Delivers drops or an irrigating stream of solution, depending on the squeeze pressure applied to the bottle
- Ensured quality and lasting value with FDA-grade polyethylene bottles featuring lot numbers and expiration dates
- **DOES NOT MEET** the current ANSI Z358.1 15-minute flushing requirement
- Made in the USA



SKU	Description
32-000455-0000	32 oz. Bottles with Extended Flow Nozzles (Trilingual)
32-000454-0000	16 oz. Bottles with Extended Flow Nozzles (Trilingual)
32-000445-0000	8 oz. Bottles with User-Controlled Delivery – Drops or Stream (Trilingual)
32-000452-0000	4 oz. Bottles with User-Controlled Delivery – Drops or Stream (Trilingual)
32-000451-0000	1 oz. Bottles with User-Controlled Delivery – Drops or Stream (English)
32-000451-0020	1 oz. Bottles with User-Controlled Delivery – Drops or Stream (French)
32-000456-0000	1/2 oz. Bottles with User-Controlled Delivery – Drops or Stream (English)
32-000456-0020	1/2 oz. Bottle with User-Controlled Delivery – Drops or Stream (French)

*\*Shelf life determined by date of manufacture. Always check product expiration date.*

**WALL STATIONS**

**Eyesaline Wall Stations**

- Sealed, sterile, bottles contain Eyesaline – a buffered, saline solution superior to tap water for emergency eye care
- Blow-fill-seal bottles are tamper resistant, yet easily removed in an emergency
- Extended flow opening provides longer flow rate than conventional bottles
- Durable, open face design holds bottles firmly in place with easy access to bottles in an emergency
- Mounts to wall with provided screws
- Durable plastic is easy to clean
- Simple, highly visible operating instructions are provided on each unit. 16 oz. and 32 oz. bottles feature trilingual instructions
- Ensured quality and lasting value with FDA-grade polyethylene bottles featuring lot numbers and expiration dates
- **DOES NOT MEET** the current ANSI Z358.1 15-minute flushing requirement
- Made in the USA



32-000460-0000



32-000462-0000

SKU	Description
32-000460-0000	16 oz. Single Eyewash Wall Station (Trilingual)
32-000461-0000	32 oz. Single Eyewash Wall Station (Trilingual)
32-000462-0000	32 oz. Double Eyewash Wall Station (Trilingual)
32-000465-0000	16 oz. Double Eyewash Wall Station (Trilingual)
32-000489-0000	Single Eyewash Wall Station (Trilingual, bottles not included)
32-000490-0000	Double Eyewash Wall Station (Trilingual, bottles not included)

*\*Shelf life determined by date of manufacture. Always check product expiration date.*

Q ~ aa • ko ] È ^ ad Q } ^ , \ | Ì { Á



## REFILLS



32-ST2050-0000

### Sterile Eyesaline Cartridge for Fendall 2000™

- Up to 24 month\* cartridge life
- 6.87 gallons (26L) total
- Sterile, buffered, pH balanced, Eyesaline solution
- Cartridge change takes less than 5 minutes

SKU	Description
32-ST2050-0000	Sterile Eyesaline Refill Cartridge for Fendall 2000 (Trilingual)

\*Shelf life determined by date of manufacture. Always check product expiration date.



32-ST1050-0000

### Sterile Eyesaline Cartridges for Fendall Pure Flow 1000®

- Up to 24 month\* cartridge life
- 3.5 gallon (13.2L) each, 7 gallon (26.4L) total
- Sterile, buffered, pH balanced, Eyesaline solution
- Cartridge change takes less than 5 minutes

SKU	Description
32-ST1050-0000	Sterile Eyesaline Refill Cartridges for Fendall Pure Flow 1000 (Trilingual)

\*Shelf life determined by date of manufacture. Always check product expiration date.



32-001050-0000

### Eyesaline Cartridges for Fendall Pure Flow 1000®

- Up to 24 month\* cartridge life
- 3.5 gallon (13.2L) each, 7 gallon (26.4L) total
- Preserved, buffered, pH balanced, Eyesaline solution
- Cartridge change takes less than 5 minutes

SKU	Description
32-001050-0000	Eyesaline Refill Cartridges for Fendall Pure Flow 1000 (Trilingual)

\*Shelf life determined by date of manufacture. Always check product expiration date.



32-001053-0000

### High Humidity Brace for Fendall Pure Flow 1000® Cartridges

- Designed for units located in high heat or humidity moisture levels of 80% and higher

SKU	Description
32-001053-0000	High Humidity Brace for Fendall Pure Flow 1000 (Trilingual)

\*Shelf life determined by date of manufacture. Always check product expiration date.



32-000401-0000

### Fendall Flash Flood® Cartridge

- Up to 24 month\* unopened cartridge shelf life (6 months activated)
- Preserved, buffered, pH balanced, Eyesaline solution
- Cartridge change takes less than 1 minute

SKU	Description
32-000401-0000	Eyesaline Refill Cartridges for Fendall Flash Flood (English)
32-000401-0022	Eyesaline Refill Cartridges for Fendall Flash Flood (French)

\*Shelf life determined by date of manufacture. Always check product expiration date.

**REFILLS**

**Eyesaline Solution**

- Use directly from container (1 gal, 3.8L) to refill the eyewash device. No mixing or measuring required
- Preserved, buffered, pH balanced, Eyesaline solution

SKU	Description
32-000502-0000	Eyesaline Solution (Premixed) for Use with Fendall Porta Stream I, II, III (English/Spanish)
32-000502-0020	Eyesaline Solution (Premixed) for use with Fendall Porta Stream I, II, III (English / French)

\*Shelf life determined by date of manufacture. Always check product expiration date.



32-000502-0000

**Eyesaline Concentrate**

- Mix with clean, potable water (10:1 ratio)
- Creates a preserved, buffered, Eyesaline solution

SKU	Description
32-000513-0000	Eyesaline Concentrate for Use with Fendall Porta Stream II, III (English/Spanish)
32-000513-0020	Eyesaline Concentrate for Use with Fendall Porta Stream II, III (English/French)
32-000509-0000	Eyesaline Concentrate for Use with Fendall Porta Stream I (English/Spanish)
32-000509-0020	Eyesaline Concentrate for Use with Fendall Porta Stream I (English/French)

\*Shelf life determined by date of manufacture. Always check product expiration date.



32-000513-0000

**Water Additive**

- Mix with clean potable water
- One bottle (8 oz.) suitable for 14-16 gallons
- 30-month\* shelf life (unopened)
- Sold in cases of four with tamper evident seals

SKU	Description
32-001100-0000	Water Additive for Use with All Portable Devices (English/Spanish)
32-001100-0022	Water Additive for Use with All Portable Devices (English/French)

\*Shelf life determined by date of manufacture. Always check product expiration date.



32-001100-0000

**ACCESSORIES**

**Dust Covers**

- Protects eyewash basin from dirt, dust and debris
- Attaches to the eyewash activation handle or pull strap
- Cover and activation handle or pull strap are detached in one motion

SKU	Description
32-002015-0000	Fendall 2000 Dust Cover
32-001015-0000	Fendall Pure Flow 1000 Dust Cover
32-000517-0000	Dust Cover for Fendall Porta Stream I, II

**Reflective Cover**

- Protective cover helps maintain fluid temperature
- Use in environments of high solar energy
- Flap and pull strap are removed in one motion

SKU	Description
32-000532-0000	Reflective Cover for Use with Fendall Porta Stream II



32-002015-0000



32-000532-0000

Q ~ aa • ko ] È ^ ad @ } ^ , \ | Æ { Á

## ACCESSORIES



32-000511-0000

### Honeywell Fluid Disposal Cart

- Allows easy collection of used flushing fluid
- Concave top surface with center drain
- Dual wheels, molded handle for easy portability

SKU	Description
32-000511-0000	Disposal Cart for Use with Fendall Porta Stream I, II, III, and Fendall Flash Flood

32-000518-0000



### Honeywell Universal Eyewash Cleaning Kit

- For use with all tank-type, eyewash stations
- Allows thorough eyewash device cleaning
- Clean prior to refilling, to remove contamination
- Helps remove contaminants from tank interior

SKU	Description
32-000518-0000	Cleaning Kit for Use with All Tank-Type Eyewash Stations



32-001061-0000

### Honeywell Waste Container

- 28 gallon waste container fits securely on cart
- Not required for Fendall Pure Flow 1000® or Fendall 2000™

SKU	Description
32-001061-0000	Waste Container for Use with Universal Cart #32-001060-000

32-000435-0000



### Honeywell Universal Bottle Mounting Device

- Expandable strap with magnetic backing holds various personal eyewash bottle sizes up to 32 oz.
- Can be mounted for permanent placement
- Easy installation, takes less than one minute
- Fits all Honeywell® personal eyewash bottles as well as most competitor bottles
- 4 per case – sold in cases only

SKU	Description
32-000435-0000	Universal Bottle Mounting Device



32-001065-0000

### Honeywell Universal Eyewash Stand

- Inexpensive alternative to wall mounting
- Versatile stand can be mounted to a floor or be used as free standing
- Compact and easy to assemble (assembly time is 5 minutes or less)
- All assembly parts are included
- Lightweight, sturdy steel tubing design (25 lbs)

SKU	Description
32-001065-0000	Eyewash Stand for Use with Fendall 2000, Fendall Pure Flow 1000, and Fendall Porta Stream I, II and III

32-001060-0000



### Honeywell Universal Eyewash Cart

- Provides quick, easy portability for self-contained, gravity-fed emergency eyewash devices
- Reliable, dual wheel design ensures durability and mobility

SKU	Description
32-001060-0000	Eyewash Cart for Use with All Portable Devices

**Honeywell**

Q ~ aa • K O ] E ^ a d Q } ^ ^ , ^ | B { Á



**ACCESSORIES**

**Honeywell Wire Storage Rack**

- Wire rack holds four 1-gallon cartridges
- Allows multiple Eyesaline cartridges to be stored in immediate vicinity of Fendall Flash Flood



32-000402-0000

SKU	Description
32-000402-0000	Wire Rack for Use with Fendall Flash Flood

**REFERENCE: PRODUCT FEATURES MATRIX**

SKU	Description	Primary Device	Secondary Device	Personal Device	Portable	Sealed-Fluid Cartridge	Sterile Saline Solution	Buffered Saline Solution	Saline Concentrate	Water Additive	Refillable	Heated/Freeze Protected	Meets ANSI 15-Min. Requirement	SEI Certified
32-002000-0000	Fendall 2000 Sterile Eyewash Station (English)	●			●	●							●	●
32-002001-0000	Fendall 2000 Heated Accessory											●		
32-ST2050-0000	Sterile Saline Refill Cartridge for Fendall 2000					●	●							
32-001000-0000	Fendall Pure Flow 1000 Eyewash Station (English)	●			●	●							●	●
32-001000-0022	Fendall Pure Flow 1000 Eyewash Station (French Canadian)	●			●	●							●	●
32-001050-0000	Saline Refill Cartridge for Fendall Pure Flow 1000					●	●							
32-ST1050-0000	Sterile Saline Refill Cartridge for Fendall Pure Flow 1000					●	●							
32-000200-0000	Fendall Porta Stream II Eyewash Station (English) with Saline Concentrate	●			●				●	●			●	●
32-000200-0022	Fendall Porta Stream II Eyewash Station (French Canadian) with Saline Concentrate	●			●				●	●			●	●
32-000200-0070	Fendall Porta Stream II Eyewash Station (Mexican Spanish) with Saline Concentrate	●			●				●	●			●	●
32-000230-0000	Fendall Porta Stream II Eyewash Station (English) with Water Additive	●			●					●	●		●	●
32-000230-0022	Fendall Porta Stream II Eyewash Station (French Canadian) with Water Additive	●			●					●	●		●	●
32-000230-0070	Fendall Porta Stream II Eyewash Station (Mexican Spanish) with Water Additive	●			●					●	●		●	●
32-000310-0000	Fendall Porta Stream III Eyewash Stn. (Freeze Protected) with Saline Concentrate	●			●				●	●		●	●	●
32-000100-0000	Fendall Porta Stream I Eyewash Station (English) with Saline Concentrate		●		●				●	●				
32-000100-0022	Fendall Porta Stream I Eyewash Station (French) with Saline Concentrate		●		●				●	●				
32-000100-0070	Fendall Porta Stream I Eyewash Station (Spanish) with Saline Concentrate		●		●				●	●				
32-000130-0000	Fendall Porta Stream I Eyewash Station (English) with Water Additive		●		●					●	●			
32-000400-0000	Fendall Flash Flood Eyewash Station (English)		●		●			●		●				
32-000400-0022	Fendall Flash Flood Eyewash Station (French Canadian)		●		●			●		●				
32-000401-0000	Saline Refill Cartridges for Fendall Flash Flood							●						
32-000440-0000	Saline Bottle Personal Carry Bag			●	●	●								
32-000455-0000	32 Oz. Bottles with Extended Flow Nozzles			●	●	●								
32-000454-0000	16 Oz. Bottles with Extended Flow Nozzles			●	●	●								
32-000445-0000	8 Oz. Bottles with User-Controlled Delivery – Drops or Stream			●	●	●								
32-000452-0000	4 Oz. Bottles with User-Controlled Delivery – Drops or Stream			●	●	●								
32-000451-0000	1 Oz. Bottles with User-Controlled Delivery – Drops or Stream			●	●	●								
32-000456-0000	1/2 oz. Bottles with User-Controlled Delivery -- Drops or Stream			●	●	●								
32-000460-0000	16 Oz. Single Eyewash Wall Station			●		●								
32-000461-0000	32 Oz. Single Eyewash Wall Station			●		●								
32-000462-0000	32 Oz. Double Eyewash Wall Station			●		●								
32-000465-0000	16 Oz. Double Eyewash Wall Station			●		●								
32-000502-0000	Saline Solution (Premixed) for Use with Fendall Porta Stream I, II, III							●						
32-000513-0000	Saline Concentrate for Use with Fendall Porta Stream II, III								●					
32-000509-0000	Saline Concentrate for Use with Fendall Porta Stream I								●					
32-001100-0000	Water Additive for Use with all Portable Devices									●				

Q ~ aa • ko] E ^ ad Q} ^, \||E { A

## HONEYWELL SKU LISTING

### PRIMARY EYEWASH DEVICE

#### Fendall 2000™

Item #	Description
32-002000-0000	Sterile Eyewash Station (Trilingual)
32-ST2050-0000	Sterile Eyesaline Refill Cartridge for Fendall 2000 (Trilingual)
32-002001-0000	Heated Accessory (Trilingual)

#### Fendall Pure Flow 1000®

Item #	Description
32-001000-0000	Eyewash Station (English)
32-001000-0022	Eyewash Station (French)
32-001050-0000	Eyesaline Refill Cartridges for Fendall Pure Flow 1000 (Trilingual)
32-ST1050-0000	Sterile Eyesaline Refill Cartridges for Fendall Pure Flow 1000
32-001053-0000	High Humidity Brace for Fendall Pure Flow 1000

### SECONDARY EYEWASH DEVICE

#### Fendall Porta Stream® II + III

Item #	Description
32-000200-0000	Eyewash Station (English) with Eyesaline Concentrate
32-000200-0020	Eyewash Station (English) with Eyesaline Concentrate (English/French)
32-000200-0022	Eyewash Station (French) with Eyesaline Concentrate
32-000200-0070	Eyewash Station (Mexican Spanish) with Eyesaline Concentrate
32-000230-0000	Eyewash Station (English) with Water Additive
32-000230-0020	Eyewash Station (English) with Water Additive (English/French)
32-000230-0022	Eyewash Station (French) with Water Additive
32-000230-0070	Eyewash Station (Mexican Spanish) with Water Additive
32-000310-0000	Eyewash Station (freeze protected) with Eyesaline Concentrate

#### Fendall Porta Stream® I

Item #	Description
32-000100-0000	Eyewash Station (English) with Eyesaline Concentrate
32-000100-0020	Eyewash Station (English) with Honeywell Eyesaline Concentrate (English/French)
32-000100-0022	Eyewash Station (French) with Eyesaline Concentrate
32-000100-0070	Eyewash Station (Spanish) with Eyesaline Concentrate
32-000130-0000	Eyewash Station (English) with Water Additive
32-000130-0020	Eyewash Station (English) with Water Additive (English/French)
32-000130-0022	Eyewash Station (French) with Water Additive
32-000130-0070	Eyewash Station (Spanish) with Water Additive

#### Fendall Flash Flood®

Item #	Description
32-000400-0000	Eyewash Station (English)
32-000400-0022	Eyewash Station (French)
32-000402-0000	Wire Storage Rack for Fendall Flash Flood
32-000401-0000	Eyesaline Refill Cartridges for Fendall Flash Flood
32-000401-0022	Eyesaline Refill Cartridges (French) for Fendall Flash Flood

\*Shelf life determined by date of manufacture. Always check product expiration date

### PERSONAL EYEWASH BOTTLES

#### Eyesaline Personal Travel Bag

Item #	Description
32-000440-0000	Eyesaline Personal Travel Bag (13" x9" x4")
32-000440-0020	Eyesaline Personal Travel Bag (French) (13" x 9" x 4")

#### Eyesaline Eyewash Bottles

Item #	Description
32-000455-0000	32 oz. Bottles with Extended Flow Nozzles (Trilingual)
32-000454-0000	16 oz. Bottles with Extended Flow Nozzles (Trilingual)
32-000445-0000	8 oz. Bottles with User-Controlled Delivery – Drops or Stream (Trilingual)
32-000452-0000	4 oz. Bottles with User-Controlled Delivery – Drops or Stream (Trilingual)
32-000451-0000	1 oz. Bottles with User-Controlled Delivery – Drops or Stream (English)
32-000451-0020	1 oz Bottles (French) with User Controlled Delivery – Drops or Stream
32-000456-0000	1/2 oz Bottles (English) with User Controlled Delivery – Drops or Stream
32-000456-0020	1/2 oz Bottles (French) with User Controlled Delivery – Drops or Stream

### WALL STATIONS

#### Eyesaline Wall Stations

Item #	Description
32-000460-0000	16 oz. Single Eyewash Wall Station (Trilingual)
32-000461-0000	32 oz. Single Eyewash Wall Station (Trilingual)
32-000462-0000	32 oz. Double Eyewash Wall Station (Trilingual)
32-000465-0000	16 oz. Double Eyewash Wall Station (Trilingual)
32-000489-0000	Single wall Station (Trilingual, bottles not included)
32-000490-0000	Double wall Station (Trilingual, bottles not included)

### REFILLS

#### Sterile Eyesaline Cartridge for Fendall 2000™

Item #	Description
32-ST2050-0000	Sterile Eyesaline Refill Cartridge for Fendall 2000 (Trilingual)

#### Sterile Eyesaline Cartridges for Fendall Pure Flow 1000®

Item #	Description
32-ST1050-0000	Sterile Eyesaline Refill Cartridges for Fendall Pure Flow 1000 (Trilingual)

#### Eyesaline Cartridges for Fendall Pure Flow 1000®

Item #	Description
32-001050-0000	Eyesaline Refill Cartridges for Fendall Pure Flow 1000 (Trilingual)

Inquiries: [hsp-meai@honeywell.com](mailto:hsp-meai@honeywell.com)

**HONEYWELL SKU LISTING**

**High Humidity Brace for Fendall Pure Flow 1000® Cartridges**

Item #	Description
32-001053-0000	High Humidity Brace for Fendall Pure Flow 1000 (Trilingual)

**Fendall Flash Flood® Cartridge**

Item #	Description
32-000401-0000	Eyesaline Refill Cartridges for Fendall Flash Flood (English)
32-000401-0022	Eyesaline Refill Cartridges for Fendall Flash Flood (French)

**Eyesaline Solution**

Item #	Description
32-000502-0000	Eyesaline Solution (Premixed) for use with Fendall Porta Stream I, II, III (English/Spanish)
32-000502-0020	Eyesaline Solution (Premixed) for use with Fendall Porta Stream I, II, III (English/French)

**Eyesaline Concentrate**

Item #	Description
32-000513-0000	Eyesaline Concentrate for use with Fendall Porta Stream II, III (English/Spanish)
32-000513-0020	Eyesaline Concentrate for use with Fendall Porta Stream II, III (English/French)
32-000509-0000	Eyesaline Concentrate for use with Fendall Porta Stream I (English/Spanish)
32-000509-0020	Eyesaline Concentrate for use with Fendall Porta Stream I (English/French)

**Honeywell Water Additive**

Item #	Description
32-001100-0000	Water Additive for use with All Portable Devices (English/Spanish)
32-001100-0022	Water Additive for use with All Portable Devices (English/French)

**ACCESSORIES**

**Dust Covers**

Item #	Description
32-002015-0000	Fendall 2000 Dust Cover
32-001015-0000	Fendall Pure Flow 1000 Dust Cover
32-000517-0000	Dust Cover for Fendall Porta Stream I, II

**Reflective Cover**

Item #	Description
32-000532-0000	Reflective Cover for use with Fendall Porta Stream II

**Honeywell Fluid Disposal Cart**

Item #	Description
32-000511-0000	Disposal Cart for use with Fendall Porta Stream I, II, III, and Fendall Flash Flood

**Honeywell Universal Eyewash Cleaning Kit**

Item #	Description
32-000518-0000	Cleaning Kit for use with All Tank-Type Eyewash Stations

**Honeywell Waste Container**

Item #	Description
32-001061-0000	Waste Container for use with Universal Cart #32-001060-000

**Honeywell Universal Bottle Mounting Device**

Item #	Description
32-000435-0000	Universal Bottle Mounting Device

**Honeywell Universal Eyewash Stand**

Item #	Description
32-001065-0000	Eyewash stand for use with Fendall 2000, Fendall Pure Flow 1000, and Fendall Porta Stream I, II and III

**Honeywell Universal Eyewash Cart**

Item #	Description
32-001060-0000	Eyewash Cart for use with All Portable Devices

**Honeywell Wire Storage Rack**

Item #	Description
32-000402-0000	Wire Rack for use with Fendall Flash Flood

Inquiries: [hsp-meai@honeywell.com](mailto:hsp-meai@honeywell.com)



**Honeywell Safety Products**

P.O. Box 232362

Emaar Business Park

Building 2, Level 2, Office 201

Dubai, U.A.E.

Tel: + 971 4 450 5800

Fax: + 971 4 450 5900

Email: [hsp-meai@honeywell.com](mailto:hsp-meai@honeywell.com)

<http://www.honeywellsafety-meai.com>

**Honeywell**

DOC5004

July 2013

© 2013 Honeywell International Inc